




Valco CST4UW and CST6UW Column Selection Valves

Actuator Considerations

In almost every case, the number of positions a multiposition actuator must index as it rotates through a 360° cycle is indicated by the product number; *i.e.*, a CSD4MW makes four 90° steps ($360^\circ \div 4 = 90^\circ$), and an SC10MW makes ten 36° steps ($360^\circ \div 10 = 36^\circ$). The Valco CST4UW and CST6UW high pressure column selection valves are the exceptions to this rule.

Valco column selection valves select from among four (CST4UW) or six (CST6UW) HPLC columns. Sample flows from the injector to the inlet of the selected column, and from the outlet of the column to the detector. As can be observed in the CST4UW schematic at right, as the actuator steps the rotor from column to column, the selection sequence begins to repeat after the rotor has rotated 180° (four 45° steps). So a four column selection valve actually requires an actuator programmed for eight positions, with position 5 selecting the same column as position 1, 6 the same as 2, etc. A six column valve needs a twelve position actuator, with 7 the same as 1, 8 the same as 2, etc.

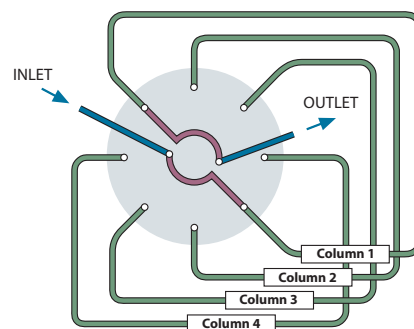

Column Selection Valves on a Standard Electric Actuator

Our standard electric actuators are available in two models specifically for use with these high pressure column selection valves. The E4X2 for the CST4UW is an 8 position actuator with the position indication display modified to reflect the actual column selected (1, 2, 3, or 4) rather than the position of the valve/actuator (1, 2, 3, 4, 5, 6, 7, or 8). In other words, you don't have to remember that position 5 is selecting the same column as position 1, or that position 8 selects the same column as position 4. Similarly, the E6X2 actuator for the CST6UW is a 12 position actuator which displays 1 through 6, reflecting which of the six columns is selected.

Valve type	No. of columns	Actuator model	Actuator positions	Display/feedback reading
CST4UW	4	E4X2	8 (4 x 2)	1, 2, 3, 4, 1, 2, 3, 4
CST6UW	6	E6X2	12 (6 x 2)	1, 2, 3, 4, 5, 6, 1, 2, 3, 4, 5, 6

Column Selection Valves on a Microelectric Actuator

Our microelectric actuators are easily programmed to index any number of positions from 3 to 99, and offer an additional benefit: when a column selection valve is ordered on a microelectric actuator, the valve and actuator are "keyed" with a pin to insure that the actuator/valve combination cannot be

assembled incorrectly – that is, with improper alignment. The position indicator of the microelectric actuator will always show the actual actuator position as it increments through 360°; it cannot be modified to reflect the column selection sequence that repeats after 180°.

Valve type	No. of columns	Actuator positions	Display/feedback reading
CST4UW	4	8	1, 2, 3, 4, 5, 6, 7, 8 (1=5, 2=6, etc.)
CST6UW	6	12	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12 (1=7, 2=8, etc.)

To change the number of positions on a microelectric actuator:

1. Shift the actuator into the setup mode by depressing the STEP and HOME switches on the manual controller, and holding them down for 8 seconds. The position display LEDs will begin to flash, displaying the current setting for the total number of positions in a full rotation.
2. Use the STEP switch to increase or the HOME switch to decrease this setting to the desired number of positions.
3. Return to the operating mode by depressing both switches until the LEDs stop blinking.

North America, South America, and Australia/Oceania contact:

VICI® Valco Instruments Co. Inc.
P.O. Box 55603
Houston, TX 77255
Sales: (800) 367-8424
Tech: (713) 688-9345
Fax: (713) 688-8106 valco@vici.com

Europe, Asia, and Africa contact:

VICI® VICI AG International
Parkstrasse 2
CH-6214 Schenkon
Switzerland
Phone: +41 41 925 6200
Fax: +41 41 925 6201 info@vici.ch

Cheminert® and VICI® are registered trademarks of Valco Instruments Co. Inc. and VICI AG

TN-709 7/05